




Cable Collar Installation Instructions




Cable Collar Installation Instructions

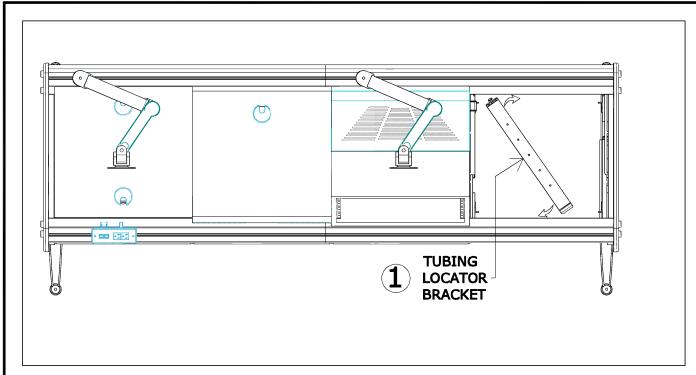

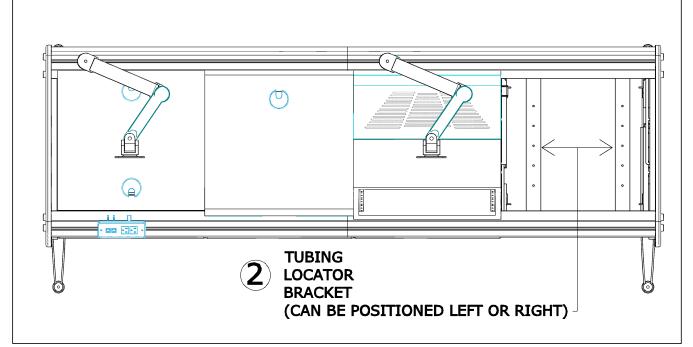

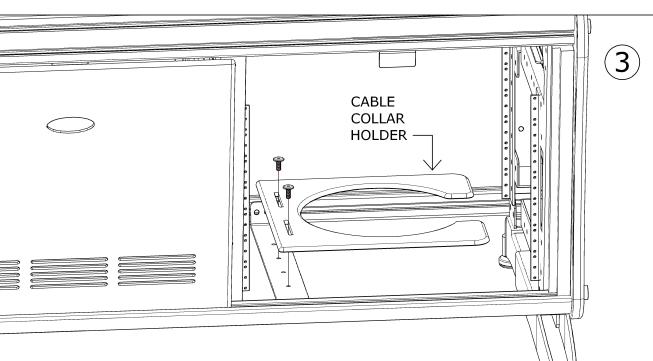

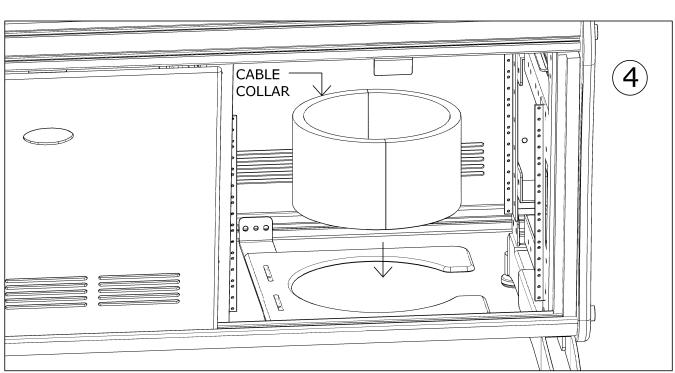

STEP ONE

ATTACH THE TUBING LOCATOR BRACKET TO THE INTELLITRAC BASE USING THE 1/4-20 X 5/8" SILVER SCREWS AND THE 1/4-20 TWIST & TURN T-NUTS (THIS BRACKET MUST INSERTED INSIDE THE GROOVES OF THE LOWER RAILS)(AS SHOWN)

STEP TWO

ONCE THE DESIRED POSITION OF THE TUBING LOCATOR BRACKET IS CHOSEN - TIGHTEN THE 1/4-20 SILVER SCREWS.

STED THREE

ATTACH THE CABLE COLLAR HOLDER TO THE TUBING LOCATOR BRACKET USING THE 1/4-20 X 3/4" LOW PROFILE BOLTS.

STEP FOUR:

INSERT THE WOOD CABLE COLLARS INSIDE THE CABLE COLLAR HOLDER.

FOR TECHNICAL SUPPORT CONTACT TBC CONSOLES: 1-888-266-7653 (support@tbcconsoles.com)



170 RODEO DR EDGEWOOD, NY 11717 PHONE: 631-293-4068 FAX: 631-293-4075

Client:

Project

CABLE COLLAR INSTALLATION INSTRUCTIONS

Drawing Title:

SHOP DRAWING

Design by:	ТВС
Drawn by:	ER
Date:	
Scale:	1" = 1' - 0"

10/32

Rack Rail Type:

Plam Spac

ALL DESIGNS, PLANS, IDEAS & SPECIFICATIONS INDICATED IN THIS DRAWING REMAIN THE ENTIRE PROPERTY OF TBC CONSOLES INC. AND MAY NOT BE REPRODUCED OR USED IN ANY MANNER WITHOUT WRITTEN CONSENT.

CLIENT SIGNATURE APPROVES ALL SPECIFICATIONS INDICATED IN THIS DRAWING.

	☐ DESIGN PROPOSAL DRAWING
ı	☑ CONSTRUCTION DRAWINGS

Revisions:		
\mathbb{X}	XX	XX
Filename:		

Drawing No: