




SET START TEMP

Press "start button" once to put unit in Start programming mode and the start up temperature will blink. Use the right Up/Down buttons to set the temperature (note: it must be at least 2F/1C higher than the turn off temperature) press "start button" again to return to the real time readout.



SET STOP TEMP

Press "stop button" once to put unit in Stop programming mode and the turn off temperature will blink, use the right Up/Down buttons to set the temperature (note: it must be at least 2F/1C lower than the turn on temperature) press the "stop button" again to return to the real time readout.

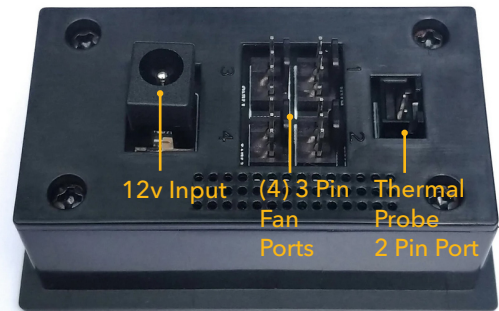

C/F OR UP

Will change display to and from Fahrenheit and Celsius or will increase the temperature when in the Start or Stop programming mode.

DOWN

Will decrease the temperature when in the Start or Stop programming mode.

DISPLAY ON/OFF

Display On/Off Switch: To turn display light off (device will still function) simply press and hold the C/F Button for 5 seconds. Repeat the process to turn display back on.



Instructional video